



INSTALLATION INSTRUCTIONS

Part # 75-1511-1

DODGE

RAM 5.2L & 5.9L

* Kit may not fit vehicles with body lift installed.

QTY PARTS LIST

- 1 Intake Tube
- 1 Intake Box
- 1 Intake Box Lid
- 1 CARB Sticker
- 1 Throttle Body Gasket
- 1 "S" Bolt
- 2 #10-24 Pan Head Screws
- 2 #10 Flat Washers
- 2 1/4" - 20 Nylock Nuts
- 1 1/4" Fender Washer
- 1 1/2" x 26" L Hose


QTY PARTS LIST (continued)

- 2 Rivet Style Jack Nuts
- 4 #10 Sealing Washers
- 4 SS Pan Head Screws
- 1 Air Filter

TOOLS REQUIRED

- Flat Head Screw Driver
- Phillips Head Screw Driver
- Pliers
- 3/8" Socket or Wrench

1. With the ignition switched off, disconnect the negative battery cable. Loosen the air cleaner hose clamp from the throttle body.

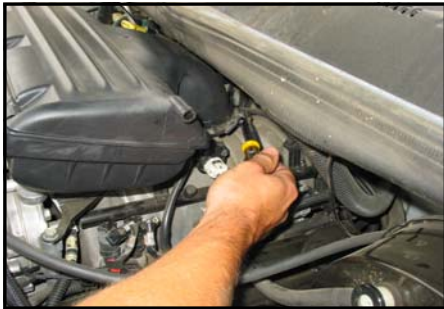

2. Disconnect the crank case vent line from the OEM air cleaner housing.




3. Remove the air cleaner and intake tube assembly by pulling up and towards the center of the vehicle to detach the tube from the inner fender well. Remove the stock throttle body gasket as well.



4. Install the supplied gasket to the throttle body.



5. Thread the supplied "S" bolt into the throttle body until tight, and back off one full turn.

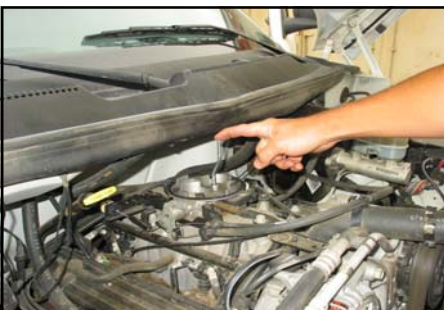

6. Locate two (2) holes on passenger side fender well.



7. A) Insert jack nuts into holes in fender well and tighten #10-24 screws into the jack nut while holding the jack nut tight with pliers.



- 7) B) Repeat step for second nuts and remove the #10-24 screws from the rivet nuts. You will use these screws later to install the intake box.



8. Install the intake box on to fenderwell and secure using the supplied #10-24 screws and 1/4" washers.



9. Insert the intake tube into air box first, then rotate the intake tube over the "S" bolt in the throttle body.



10. Adjust the air tube until it seats completely over the throttle body and rests on the supplied gasket.



INSTALLATION INSTRUCTIONS (continued)

11. Install the 1/4" fender washer and nut onto "S" bolt and tighten securely. **Do not over tighten the nut.**



12. Install crank case vent line from the intake tube to the fitting on the valve cover.



13. Slide the filter's hose clamp over the air tube first and then install the air filter into the air box. Push the filter against the inner wall of the air box and tighten hose clamp securely.



14. Install clear intake box lid using supplied sealing washers and SS pan head screws.



15. Ensure all connections are tight and positioned properly before starting vehicle. Reconnect negative battery terminal. **Adhere the CARB sticker in plain sight under the hood.**

PERFORMANCE TESTING

- * Engage parking brake and start your engine. Listen for abnormal noises. If an air leak is detected, re-inspect hoses and connections as they may need to be repositioned and tightened.
- * S&B FILTERS RECOMMENDS THAT YOU KEEP YOUR OEM INTAKE SYSTEM IN THE EVENT IT IS REQUIRED IN THE FUTURE.
- * In order to maintain your warranty, all connections and components must be checked periodically for alignment and for proper tension on all connections. Failure to do so will void your warranty.
- * Use only S&B Filter cleaning and oil products to service your filter. Using any other brand oil and or cleaners may void your warranty.

PRECISION CLEANING & OILING KIT

S&B'S Precision Cleaning & Oiling Kit allows vehicle owners to properly maintain their high performance air filters by precisely applying the correct amount of oil. The clearly marked bottle and easy-to-use appli-



Part No. 88-0005

Order online today at www.sbfilters.com
or through your local S&B Distributor