



INSTALLATION INSTRUCTIONS

S&B P/N 75-1534

2005-2007

**Dodge Ram
V8-5.7L Hemi**

S&B P/N 75-1534		Parts List			Tools Needed	
Qty	Description	Qty	Description	Qty	Description	
1	4.5" - 2" Adapter	2	#60 Hose Clamps	1	3/4" 90 Deg. Hose Mender	Phillips head screwdriver
1	3.75" - 3" Adapter	2	#72 Hose Clamps	1	3/4" Grommet	Flat head Screwdriver
1	Intake Box	1	Steel Ring Adapter	1	Air Filter	13 mm wrench
1	Intake Scoop	1	Ring Gasket			
1	Intake Tube	4	10-24 Pan head Screws			
1	Instruction Sheet	4	#10 Washers			

1. With the engine turned off, disconnect the vehicle's negative battery cable.



5. Remove the OEM air filter from the vehicle.



9. Locate the metal adapter ring, gasket, and #10 screws and washers.




2. Loosen the hose clamp that connects the OEM intake tube to the resonator housing.



6. Pull up and remove the air box from the vehicle.



10. Attach the adapter ring to the S&B air filter shield.

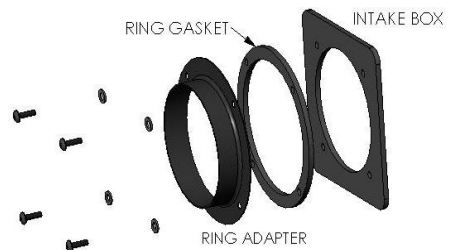

3. Disconnect the CCV breather hose from the OEM air box.



7. Loosen and remove the 2- 13mm bolts that secure the OEM box cradle.



11. Slide the 4.5" x 2" hose adapter onto the adapter ring. Use the #72 hose clamp and secure the hose adapter.



4. Unclip the OEM air box and remove the upper air box assembly and intake tube from the vehicle.



8. Reference the photo below. Your vehicle's engine compartment should look the photo.



12. Slide the S&B air scoop into the hose adapter. Use the #72 hose clamp and secure the assembly.



INSTALLATION INSTRUCTIONS (continued)

13. Install the S&B air filter shield using the 13mm OEM hardware.



14. Slide the 3.75" X 3" hose adapter onto the S&B intake tube. Slide and space the #60 hose clamps onto the tube per the photo below.



15. Install the 3/4" grommet into the S&B intake tube.



16. Insert the 3/4" elbow into the grommet in the S&B intake tube.



17. Place the S&B intake tube in the S&B shield, then onto the OE intake housing. Secure the #60 hose clamps.



18. Use the #8 hose clamp and connect the CCV hose to the 3/4" elbow on the tube.



19. Tighten all hose clamps and install the S&B high performance air filter. Re-connect the negative battery cable.



Testing & Warranty Info:

1. Engage parking brake and start your engine. To ensure that the system was installed properly, listen for abnormal noises. If an air leak is detected, re-inspect hoses and connections as they may need to be tightened.
2. We recommend that you keep your stock (OEM) intake system in the event that is required in the future.
3. In order to maintain proper warranty, all connections and components must be checked periodically for alignment, re-tightening of all the connections and cleaning. Failure to do so may void your warranty.
4. We recommend that you only use S&B oil and cleaner products to service your filter. Using any other manufacturer's products may void your warranty.

Smog Certification Note:

The California Air Resource Board (CARB) requires that an E.O. identification label be applied to the vehicle in order to pass a smog check inspection when a High Performance Intake Kit has been installed.

You must place the E.O. label provided on or near the intake kit after installation so that the smog check technician can easily verify the E.O. number.

Restore your High Performance Air Filter

PRECISION CLEANING & OILING KIT

S&B'S Precision Cleaning & Oiling Kit allows vehicle owners to properly maintain their high performance air filters by precisely applying the correct amount of oil. The clearly marked bottle and easy-to-use applicator allow the user to measure and apply the proper amount of oil for each application. S&B has conducted extensive testing with the Precision Cleaning Kit to ensure that it can be used on most cotton high performance filters available today.

Part No. 88-0005 Order online today at www.sbfilters.com
or through your local S&B Distributor



787 S. Wanamaker Ave, Ontario, CA 91761
(909) 947-0015 Phone • (909) 947-0603 Fax
www.sbfilters.com